 
 





DESCRIPTION	ORDER NO.
Screw for wedge M8x16 (for code 692)	990.064.00
Screw for wedge M8x12 (for code 693)	990.065.00
Screw for wedge M6x16 (for code 694)	990.066.00
Screw for scoring knive M5x8 (for code 694)	990.067.00
Wedge for knives (for code 692)	692.999.01
Wedge for knives and limitors (for code 693)	693.999.01
Wedge for knives 48x8x12 mm (for code 694)	694.999.01
4 mm hex key	991.064.00
HM straight knife 50x12x1,5 mm (for code 694)	790.500.00
HM scoring knife 14x14x2 mm (for code 694)	790.140.00






Cuchillas y contracuchillas afilados (serie larga)

DESCRIPTION	LB Adjusting length	Cutting length	ORDER NO.
Pair of knives	24	40	690.192
Pair of limitors	24	40	691.192

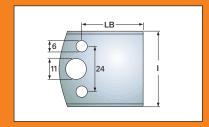

Blank knives and limitors

DESCRIPTION	LB Adjusting length	Cutting length	ORDER NO.
Blank knives	32,5	40	690.193
Blank knives	34	50	690.599
Blank limitors	32,5	40	691.193
Blank limitors	34	50	691.599

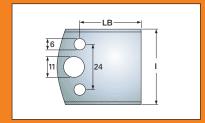

Shaper safety precautions

ALWAYS thoroughly check all cutters for damage and flaws before using.

ALWAYS wear safety glasses and ear protection when using power tools.

ALWAYS thoroughly read the owners manual and manufacturer's instruction.

thoroughly read the owners manual and manufacturer's instructions before working with tools.

ALWAYS use guards that were supplied with your shaper.

ALWAYS use a fence with your shaper. Do not make freehand cuts.

ALWAYS use pusher blocks, especially when working with small or narrow pieces.

ALWAYS unplug your shaper before cleaning or adjusting the tool, or before making cutter or knife

ALWAYS be sure the spindle nut is tight before plugging in the shaper.

ALWAYS check that knives are properly and securely installed in the cutterhead when using interchangeable-knife systems.

ALWAYS keep your tools sharpened, clean and stored in a safe place to avoid breakage and acci-

ALWAYS feed the work against the rotation of the knives.

dents and to extend the life of your bits and blades.

ALWAYS be sure your workpiece is completely supported, before and after the cut.

NEVER remove guards or any other safety devices from your shaper.

NEVER use dull or damaged knives.

NEVER force the cut or overload the second s

NEVER force the cut or overload the shaper.

NEVER change cutters or knives or make adjustments with the shaper plugged in.

NEVER make adjustments to the shaper while the cutter is turning.

